JVC Quick Start Guide

# 22" LED TV WITH DVD PLAYER

# LT-22C540

### Thank you for purchasing your new JVC TV.

Your new TV incorporates the latest technology to enhance your viewing experience. We would suggest that you allow about 20 mins for initial setup.

Please follow this guide for a successful first time installation.

## ۲

З

The latest eco-friendly power-saving technology will switch off the TV if device is left on and idle for 4 hours. Please refer to "Auto Standby" under the "Time Settings" section of the instruction manual for more detail.

1 Unpacking		2
	the unit. Retain the packaging. o so according to any local regulations.	
<b>√</b> TV	Screw A x 1	
🗹 TV Stand Support	Screw B x 4	
🗹 TV Base	✓ Instruction Manual	
Remote Control / AAA Batteries x 2	🗹 Quick Start Guide	
🗹 Rear Spacers x 4		Inst in th

# Installing the Base Stand

1. Lay the TV down on a flat surface with the back side facing up, and ideally at the edge of a table so that the base of the TV slightly overhangs on it. Please make sure a soft cushioned material (such as a pillow or thick piece of foam) is placed beneath the screen.

2. To install the TV stand, first attach the stand support to the TV by using screw A. Align with the screw hole then use screws to fix the stand support to the TV.

**Operating Your Remote Control** 

Install the batteries correctly by following the polarity (+ and -) indications

1. Press and lift the back

compartment of the

remote control.

2. Insert two AAA size

in the battery compartment.


cover.

batteries. Close the


battery compartment

cover to open the battery

3. To install the base stand, align the screw holes, then secure with a screw driver (not included) using the 4 screw B provided.

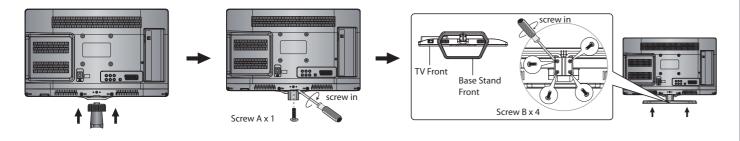

#### **Connecting the Aerial** $\Delta$

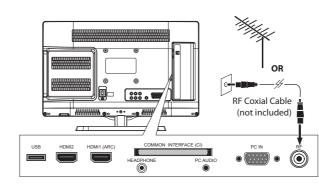

Connect one end of the RE coaxial cable to the aerial socket on the wall and the other end of the cable to the RF (75 $\Omega$ ) socket at the rear right side of your TV.


### $\triangle$

 2

Do not connect the TV to the mains supply until you have completed all the connections.

# **6** Turning the TV On for the First Time

The first time you turn the TV on, it will go straight into the First Time Installation menu.



- 1. Press the **OK** button to start Time Installation menu.

- 2. Press the ▲◀▶▼ buttons to select your desired languag displayed on the menu. The default on-screen menu lang is set as English. Press the OI button to confirm.
- 3. Press the ▲▼ buttons to sele your desired mode and then the **OK** button. Press the to select Yes to confirm or th button to select No to car and return to the Mode Sel menu

#### **Target Region Setting** 7


During tuning your TV may have received signals from more than one transmitter. If this has occurred the Target Region Descriptor screen will be displayed. This will enable you to select the correct regional transmission for the local news service that you require

Press the **I** buttons to adjust each option's setting and then press the OK button to confirm.

Well done, your new TV is now ready to use. You will find that there are many exciting features available. To get to know all these features, please take some time to read the instruction manual provided with your TV. If after reading the instruction manual you have additional questions related to the use of your TV please call our UK Call Centre on 0844 561 1234. Our UK Customer Contact Centre is open Monday-Saturday 8am-8pm or Sunday 8am-6pm.


 $( \mathbf{ } )$ 

 $(\mathbf{\Phi})$ 

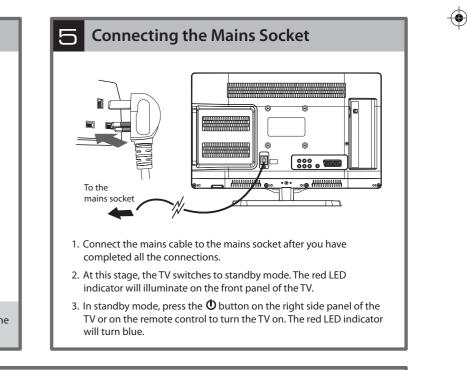

۲

t <b>First</b>	UK Sweden France	Country Ireland Finland Spain OK	Norway Denmark Portugal	<ol> <li>Press the ▲◀▶▼ buttons to select the country where you will operate the TV. Press the OK button to confirm.</li> </ol>
ge to be e nguage <b>DK</b>	Channel Tuning DTV : 3 Channel(s) Radio : 0 Channel(s) Data : 0 Channel(s)			5. DTV Channel tuning will commence. This operation may take up to 3 minutes. The display will show the progress of the tuning and the number of channels found.
lect n press button he ancel <b>lect</b>	36%	UHF CH	(DTV) skip.	

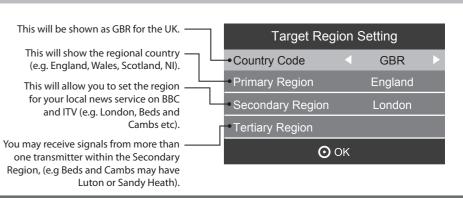

(QSG-LT-22C540-140530V2)