

JVC

Quick Start Guide

50" LED Smart HD TV

LT-50C740

Thank you for purchasing your new JVC TV.

Your new TV incorporates the latest technology to enhance your viewing experience. We would suggest that you allow about 20 mins for initial setup. Please follow this guide for a successful first time installation.



The latest eco-friendly power-saving technology will switch off the TV if device is left on and idle for 4 hours. Please refer to "Auto Standby" under the "Time Settings" section of the instruction manual for more detail.

1 Unpacking

 
Remove all packaging from the unit. Retain the packaging. If you dispose of it please do so according to any local regulations.

- TV
- YPbPr Cable
- TV Stand
- FAV Cable
- Remote Control/ AAA Batteries x2
- Instruction Manual
- Screws x 4
- Quick Start Guide

Please inspect your TV for damage after unpacking. If you do notice any damage please consult your dealer.


2 Operating Your Remote Control

- Slide open the battery compartment on the back of the remote control.
- Insert two AAA size batteries. Make sure to match the (+) and (-) ends of the batteries with the (+) and (-) ends indicated in the battery compartment.
- Slide the battery compartment cover back into place. Make sure it clicks into place.

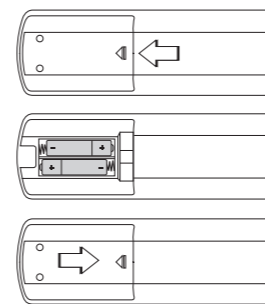

3 Installing the Base Stand

 
- Ensure the TV is switched off and not connected to the mains power supply.
- Lay the TV down on a flat surface ideally on the edge of a table so the base of the TV slightly overhangs the edge of the table, with the back side facing up. Please make sure a soft cushioned material (such as a dry bath towel or thick piece of foam) is placed beneath the screen.
- Slide the stand under the lip, the neck will fit snugly over the screw holes. Then screw the stand to the TV using the 4 screws supplied.

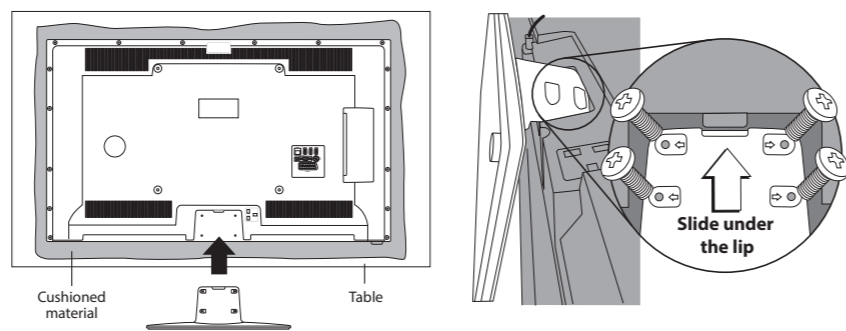

The LCD display is very fragile, and must be protected at all times when installing and removing the base stand. Be sure that no hard or sharp object, or anything that could scratch or damage the LCD display, comes into contact with it. DO NOT exert pressure on the front of the TV at any time because the screen could crack.

4 Connecting the Aerial and Turning on the TV

 
- Connect one end of the RF coaxial cable to the aerial socket on the wall and the other end of the cable to the **ANT** socket on the back of your TV.
- Plug the TV into a mains socket and switch on at the mains.
- In standby mode, press the **Power** button on the remote control to turn the TV on. The LED indicator will flash for a few seconds then the TV will switch on.

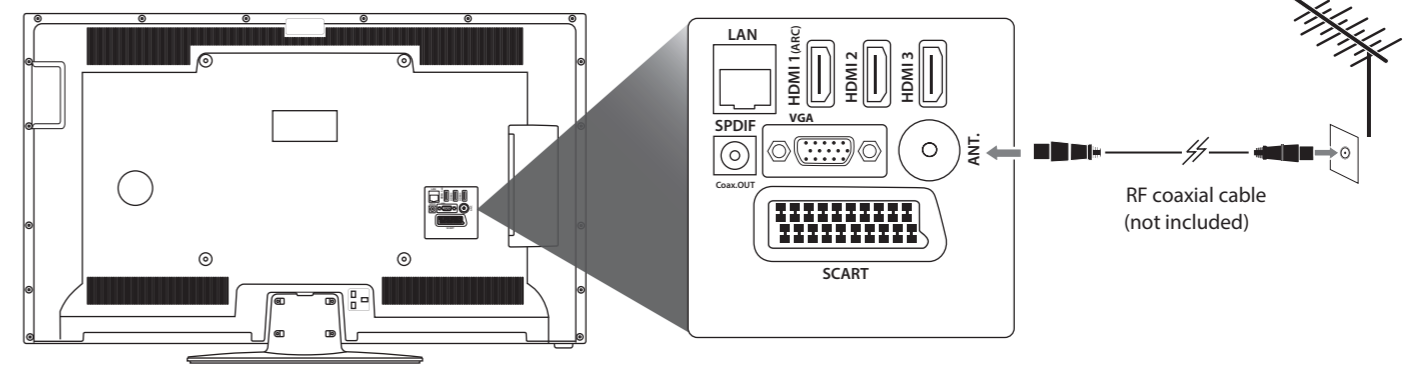

- Do not connect the TV to the mains supply until you have completed all the connections.
- Always disconnect the TV from the mains socket when not in use for a long period of time.
- The **Power** button on the remote control is only used for switching the TV into standby, it does not disconnect the TV from the mains power. To completely disconnect the mains power, please remove the mains plug from the mains socket.

5 Tuning in the TV

 - The first time you turn the TV on, it will go straight into the **First Time Installation** menu. Please ensure the aerial is plugged in. Press the **Up/Down** buttons to highlight your language then press **OK**.

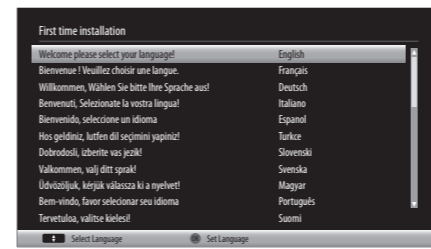

- Press the **Left/Right** buttons to select your country.



 
- Press the **Down** button to highlight Search Type, then press the **Left/Right** buttons to select Digital Only. This will only search for the digital channels.

- Press the **Down** button to highlight Teletext Language, then press the **Left/Right** buttons to select your language. The majority of people will want this set to West.



- Press the **Down** button to highlight Scan Encrypted Channel (pay-per-view channels), then press the **Left/Right** buttons to select Yes or No.

- Confirm these settings by pressing **OK**.

- Press the **Left/Right** buttons to highlight Home Mode then press **OK**.

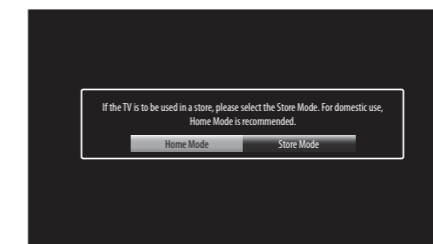


  - You will now be asked if you want to start the automatic channel scan. Press the **Left/Right** buttons to highlight Yes and press **OK**.

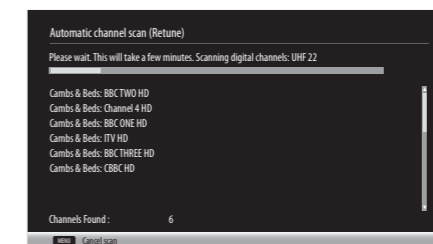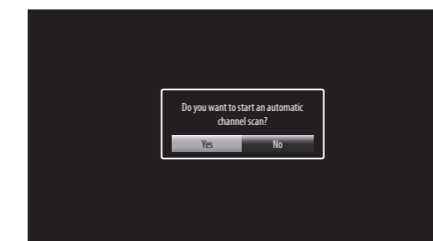


Choose Region (UK only)

 During tuning, your TV may have received signals from more than one transmitter. If this has occurred the Choose Region screen will be displayed. This will enable you to select the correct regional transmission for the local news service that you require.

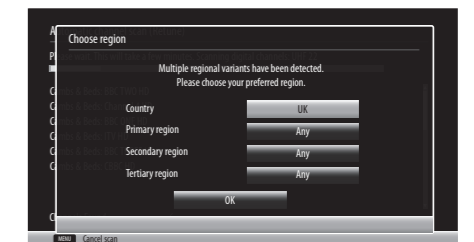

- Press the **Down** button to highlight **Primary region**, then press the **Left/Right** buttons to select your Primary Region e.g. England.
- Press the **Down** button to highlight **Secondary region**, then press the **Left/Right** buttons to select your Secondary Region e.g. London.
- Press the **Down** button to highlight **Tertiary region**, then press the **Left/Right** buttons to select your Tertiary Region e.g. Greater London.
- Press the **Down** button to highlight OK then press **OK**. Your TV is now fully tuned in.
- The Edit Channel list will appear, press the **EXIT** button to remove this. Your TV is now fully tuned in and ready to use.


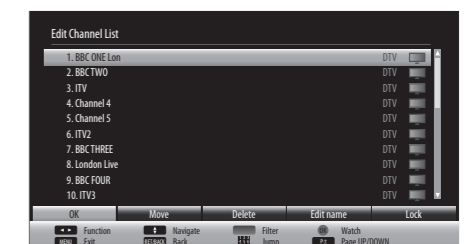 


6 Connecting the TV to the Internet (optional)

To use the Smart features on your TV it needs to be connected to the Internet. Your TV has a wireless connection built in, so connecting an Ethernet cable is optional, however this will give you the quickest internet connection.


Using a Wireless Connection

  1. Press **MENU** on your remote control, select **SETTINGS**, then press **OK**. The Settings menu will appear.
2. Select **NETWORK SETTINGS** from the menu and press **OK**. The Network Settings screen will appear.
3. Press **◀** or **▶** to select **Wireless Device**, then press **OK**.
4. From the list of networks that appear, select your network. You will then be prompted to enter your password. Choose OK from the on screen keyboard.
5. Press **EXIT** on your remote control to exit the Network Settings Screen.
6. To access your TV's smart features, press **🌐** on your remote control.

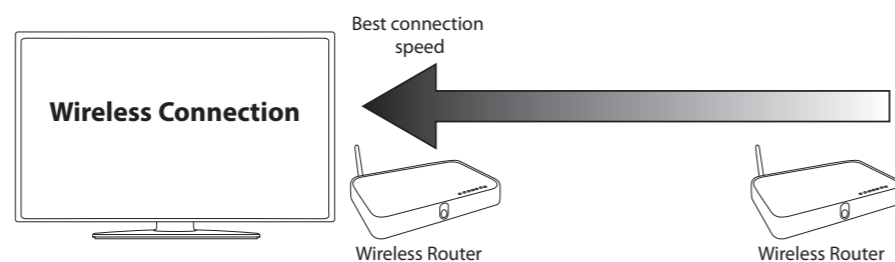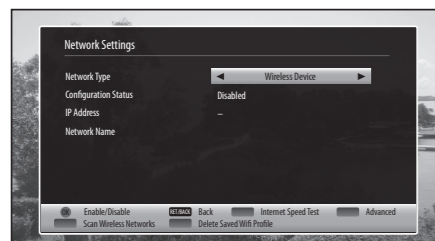

Using a Wired Connection

 1. Connect one end of the Ethernet cable to the **LAN** socket on the back of your TV.
2. Connect the other end of the Ethernet cable to your router.
3. Press **MENU** on your remote control, select **SETTINGS**, then press **OK**. The Settings menu will appear.
4. Select **NETWORK SETTINGS** from the menu and press **OK**.
5. Press **◀** or **▶** to select **Wired Device**, then press **OK**.
6. The Configuration Status should now show as Connected.
7. To access your TV's smart features, press **🌐** on your remote control.

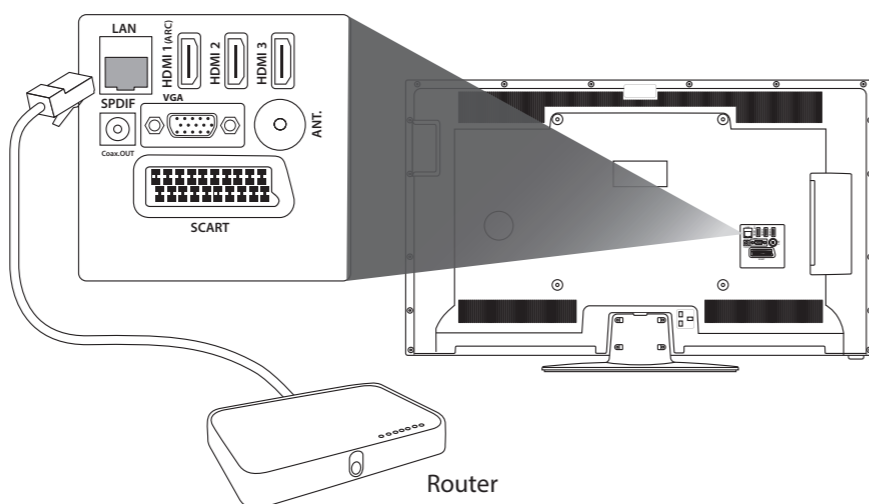

⚠ Do not connect the TV to the mains supply until you have completed all the connections.

Well done, your new TV is now ready to use. You will find that there are many exciting features available. To get to know all these features, please take some time to read the instruction manual provided with your TV.

(QSG-LT-50C740-140625V1)

7 Remote Control Overview

1. SOURCE

Press to change the source you are viewing.
TV - SCART - AV - HDMI 1 - HDMI 2 - HDMI 3 - YPbPr - VGA/PC.

2. ⏻

Switch the TV between on and standby mode.

3. NETFLIX Button

Connects to Netflix for viewing online TV shows and films (internet connection required).

4. YouTube Button

Connects to YouTube (internet connection required).

5. 🌐

Connects to the internet (internet connection required).

6. 🎵 (Media Browser)

Press to enter the media browser menu, a hard drive will need to be attached to the USB port.

7. PLAYBACK and RECORD buttons

- ● starts a recording, continue to press will add more recordings.
- ▶ plays a recording.
- || pauses a recording and starts timeshifting in TV mode if you have a hard drive attached to the USB port.
- ■ stops a recording.
- ◀▶ searches forwards and backwards when viewing a recording.

8. LANG.

Selects the Current Language menu.

9. 🗣️ (Subtitles)

Press to switch subtitles on and off.

10. COLOURED BUTTONS

Access the TELETEXT items (TV mode) or menu options.

TELETEXT (RED)

Accesses TELETEXT.

11. 0-9 Number Button

- Press to select a programme. (TV / RADIO mode)
- Select numbered items in a menu.

12. TV

- Press to enter TV mode when viewing other sources.
- Press to view the channel list when in TV mode.

13. ⏪ (Previous programme/source)

- Press to switch between the previous programme or source that was selected.

14. MENU

Display the main menu.

15. Q. MENU

Press the select the Settings menu.

16. V + / -

Adjust the volume.

17. P+ / P-

Press to select the next channel up or down the channel list.

18. OK

- Press OK to select or save a setting.

19. ⏪⏩

- Allow you to navigate the OSD menus and adjust the system settings to your preference.

20. BACK

Press to move backwards through menus.

21. EXIT

 
Press to exit a menu.

22. 📺 FAVOURITES

Press to access favourite channels list.

23. i (info)

Press to see programme information in TV mode.

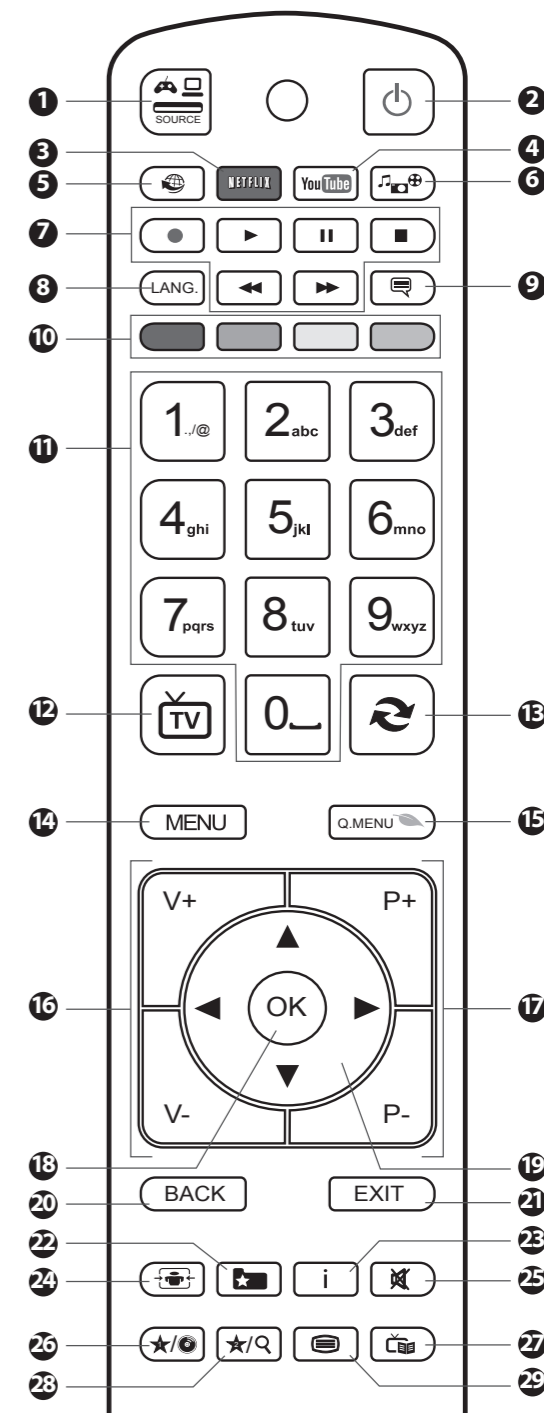

24. 📐 (Aspect ratio)

Press to adjust the aspect ratio of the picture.
AUTO - 16:9 - Subtitle - 14:9 - 14:9 Zoom - 4:3 - Cinema.

25. MUTE

Mute and restore the sound.

26. ★/📺 (My Button 1)

Press and hold for 5 seconds to set a favourite channel/source. This button is set to YouTube as a default setting.

27. 📺 (Programme Guide)

Press to view the Programme Guide.

28. ★/Q (My Button 2)

- Selects the Channel Network Type menu in TV mode.
- Press and hold for 5 seconds to set a favourite channel/source, this will then remove the Channel Network Type menu.

29. 🗣️

Press to enter teletext if available.